

Samsung SmartTV Channel Setup

Please note that this has to be done for Hospitality menu, channels that have been scanned require a factory reset to operate properly


HotelMode Configuration

First you have to change the hotel mode.


Access HotelServiceMenu by pressing following buttons one after another:

INFO - MENU - MUTE - POWER

The TV must be switched OFF!


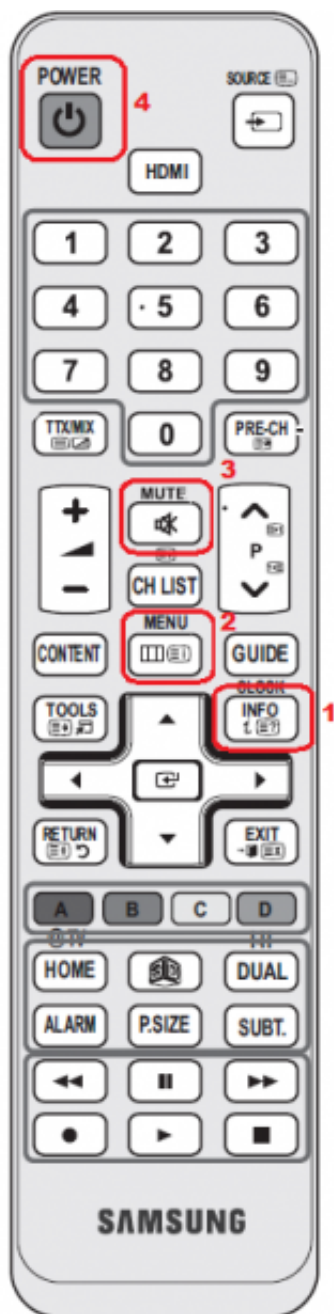


Go to HOTEL OPTION - HOSPITALITY MODE
and set the mode to "INTERACTIVE"

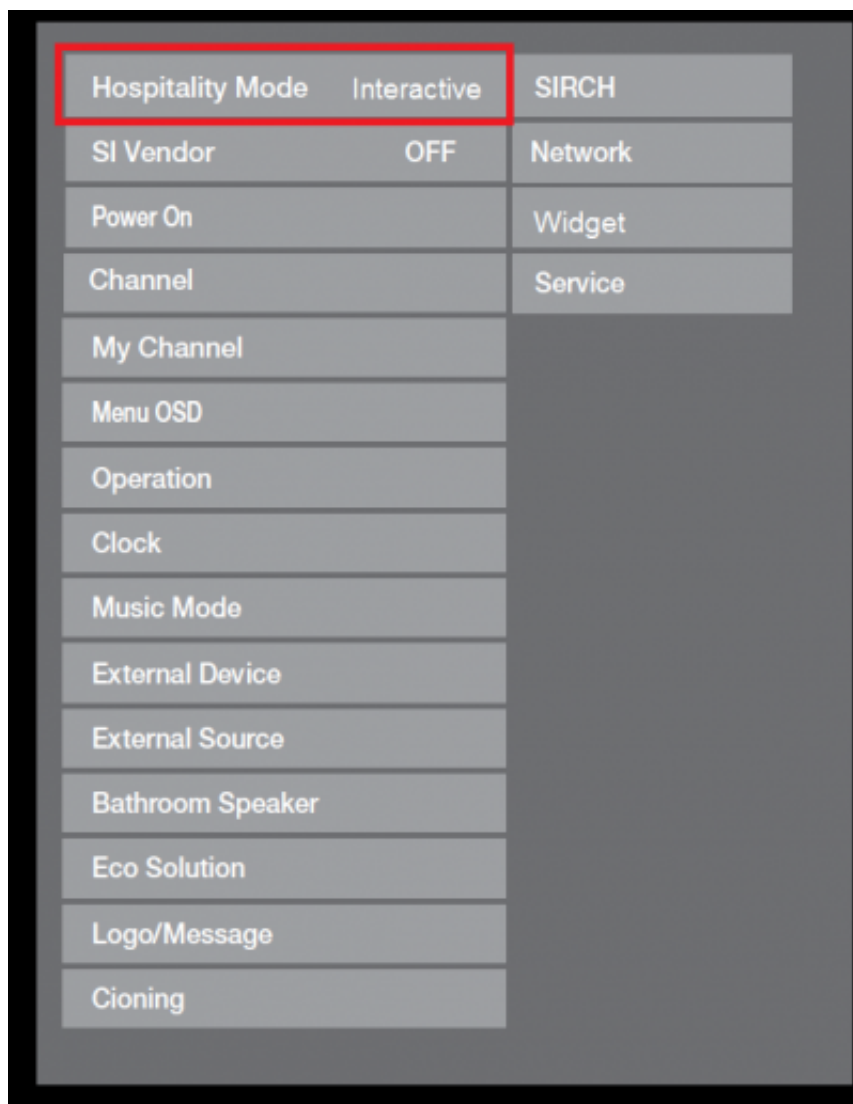

Channel Setup

Go to CHANNEL - CHANNEL SETUP and tune the TV

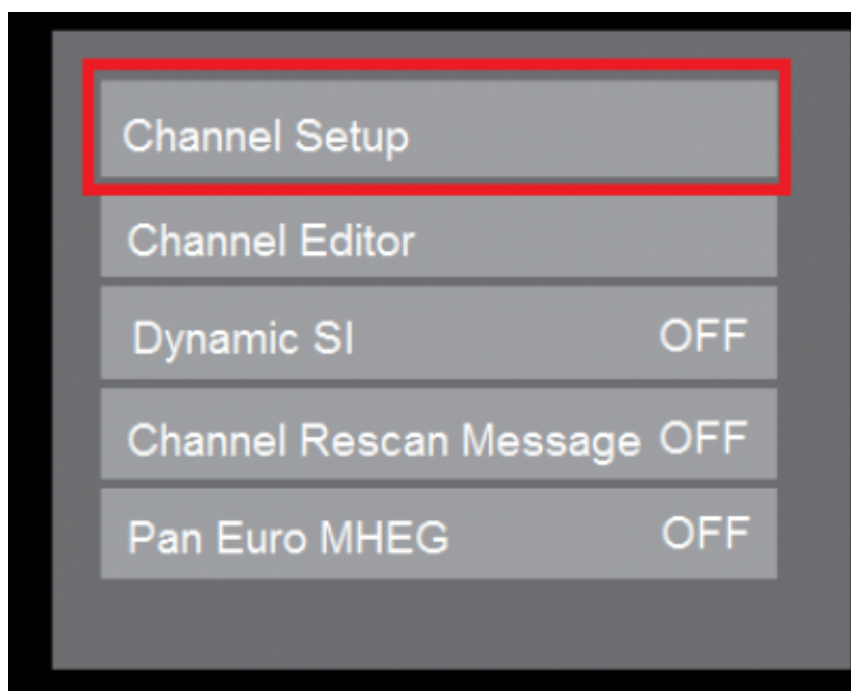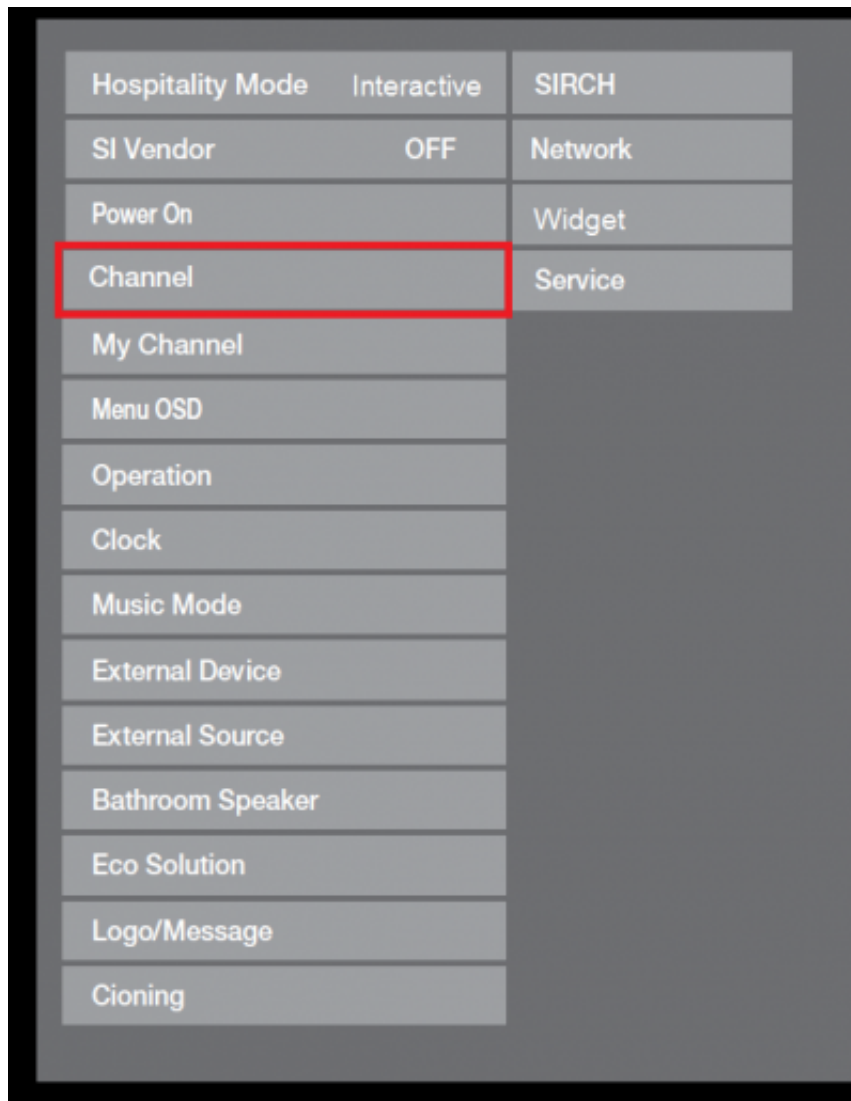



NOTICE:

Select „Service Provider“ = „other“



OSD will change to UserGUI, press RETURN on the remote after configuration to go back.

Use „Channel Settings“ ? „Transfer Channellist“ ? PIN = 0000 ? OK ? Export to USB

Channel Configuration

After tuning you have to select and sort the TV-Channel

Go to CHANNEL EDITOR and select the channel and change the programmorder

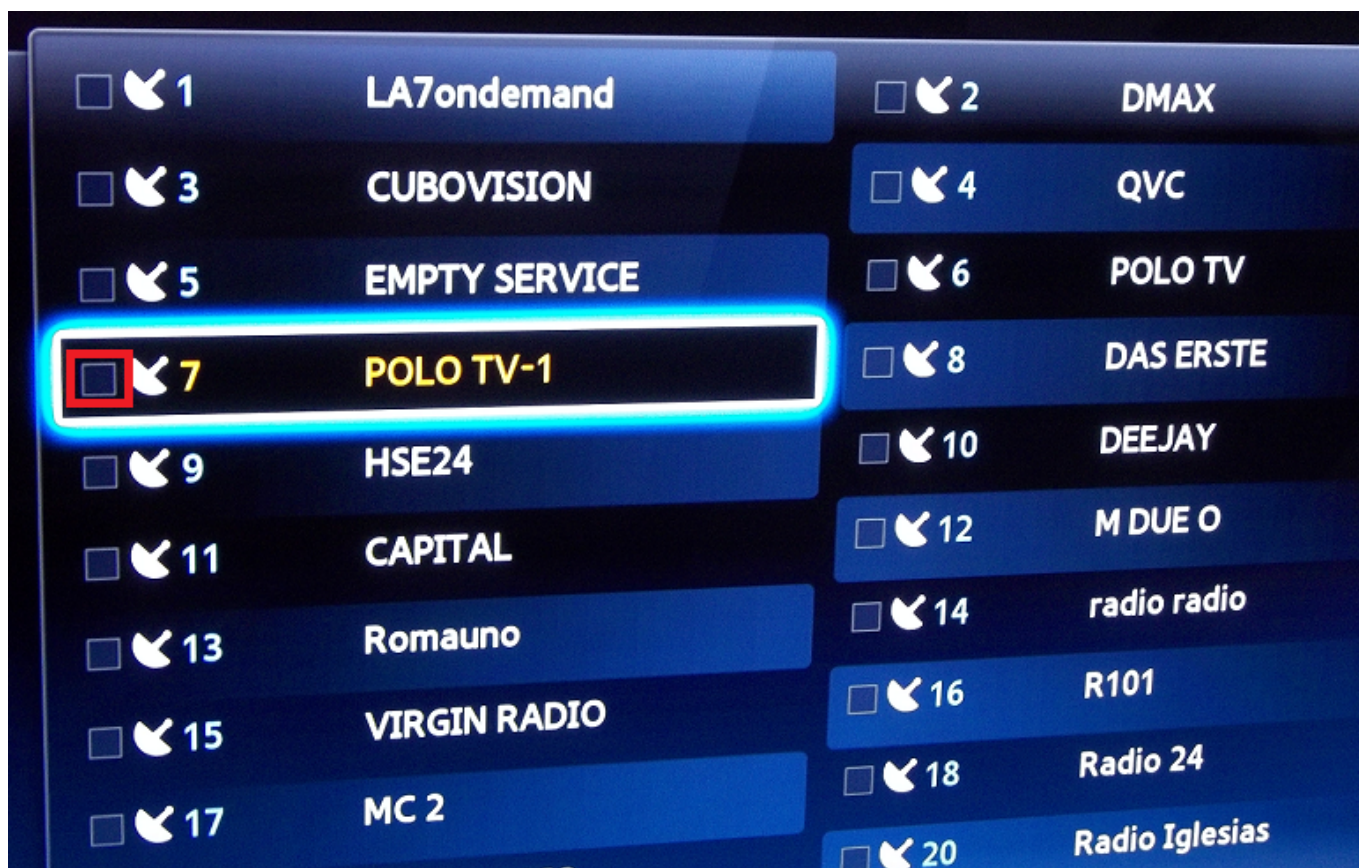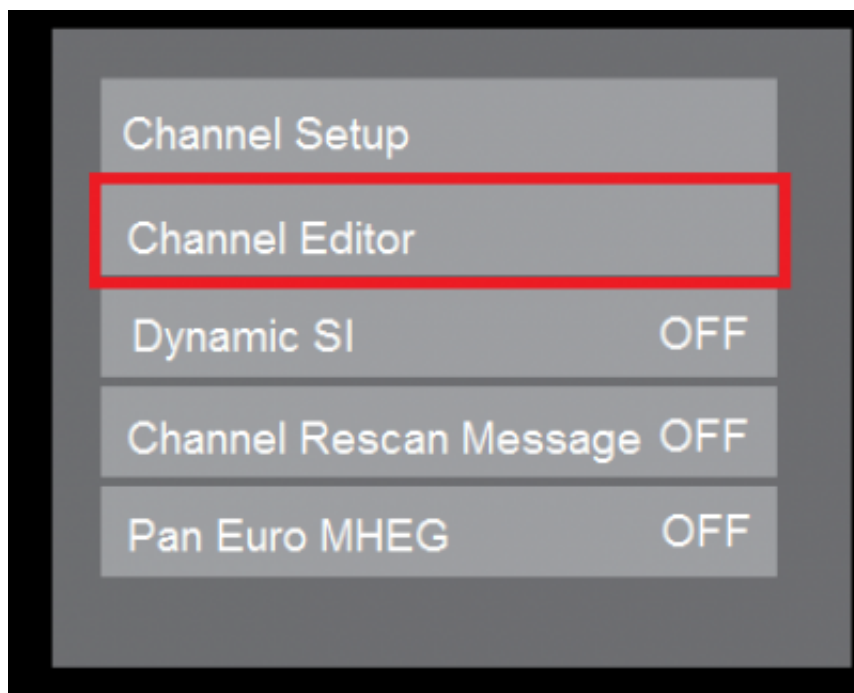


Finish Channel Configuration

After configuration you have to change the hotel mode back to STANDALONE and enable the Widget mode

Go to HOSPITALITY MODE and set STANDALONE
Go to WIDGET -WIDGET MODE and set it to ON

Hospitality Mode	Standalone	SIRCH
SI Vendor	OFF	Network
Power On		Widget
Channel		Service
My Channel		
Menu OSD		
Operation		
Clock		
Music Mode		
External Device		
External Source		
Bathroom Speaker		
Eco Solution		
Logo/Message		
Cioning		

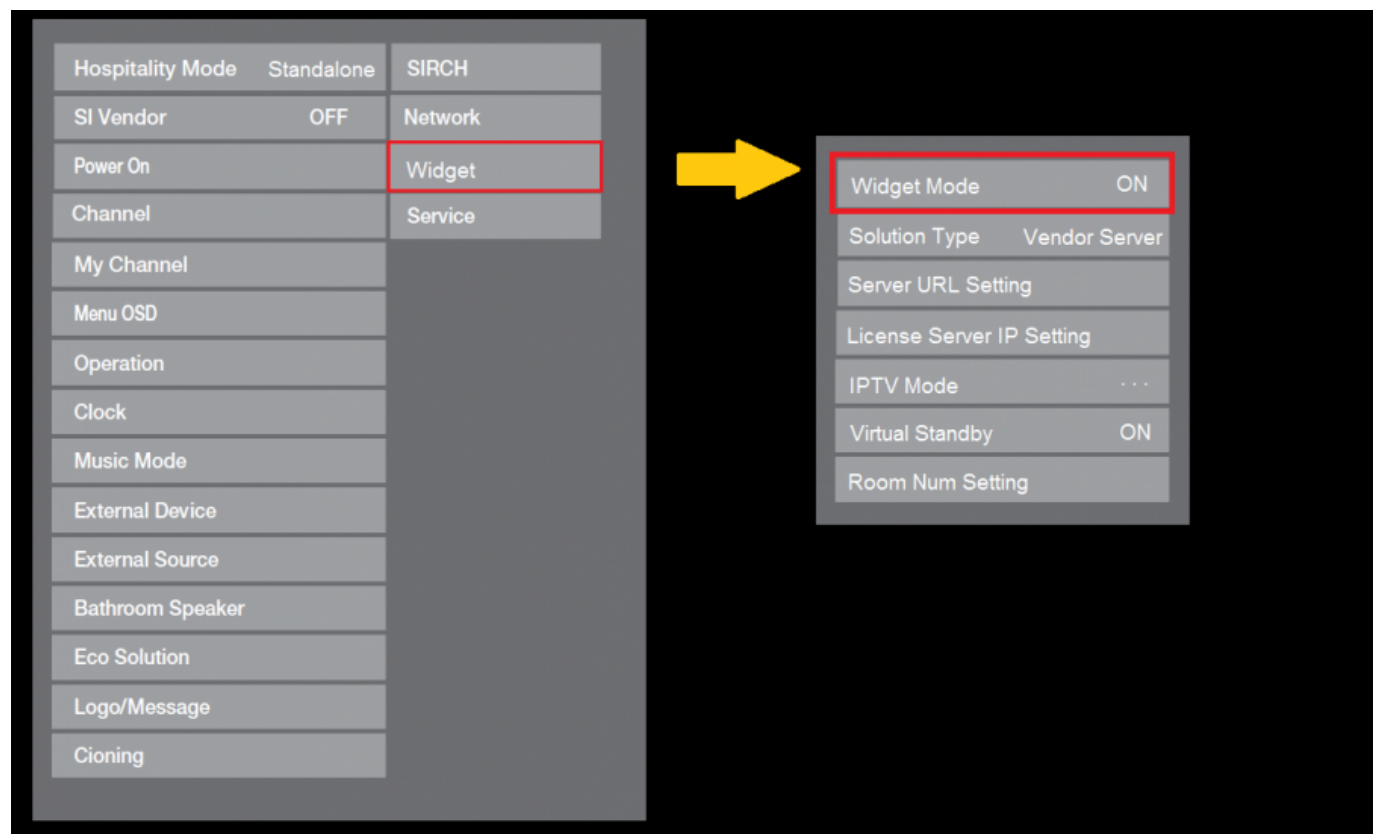

PLEASE NOTICE:

To finish the configuration you have to POWER OFF the TV After Power-up the channel are in the TV-list, there is no further configuration needed