


TRIAK Academy

TDX configuration for Samsung DRM

TDX simulcrypt setup

- Purchase and enter the "Samsung DRM" license.


(<https://triax.freshdesk.com/en/support/solutions/articles/12000020494-purchase-retrieve-a-license>)

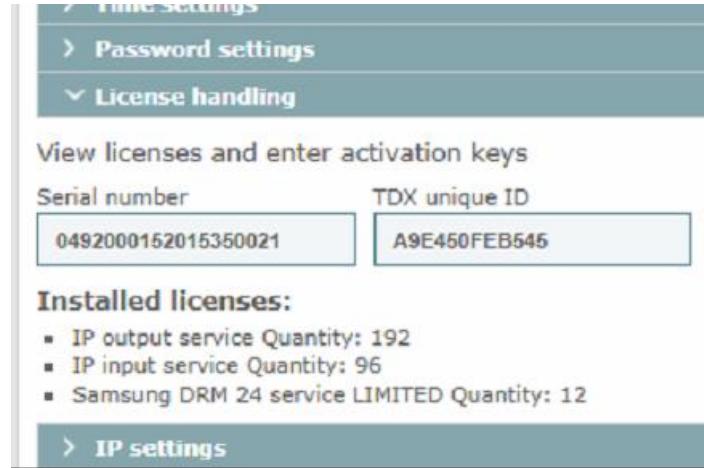

The screenshot shows the TRIAX License Management interface. At the top, there are two sections: 'Password settings' (with a plus sign icon) and 'License handling' (with a minus sign icon). Below these is a section titled 'View licenses and enter activation keys'. It contains two input fields: 'Serial number' with the value '0492000152015350021' and 'TDX unique ID' with the value 'A9E450FEB545'. Underneath this is a section titled 'Installed licenses:' which lists three items with quantity counts: 'IP output service Quantity: 192', 'IP input service Quantity: 96', and 'Samsung DRM 24 service LIMITED Quantity: 12'. At the bottom of the interface is a section titled 'IP settings' (with a plus sign icon).


TDX simulcrypt setup

- Purchase and enter the "Samsung DRM" license.**
(<https://triax.freshdesk.com/en/support/solutions/articles/12000020494-purchase-retrieve-a-license>)
- Configure CAS settings (these are the default)**
 - Cas ID : 0x112 (Samsung DRM)
 - EMM port: 5000
 - ECM server: IP-address of Lynk CAS server
 - ECM port: 9999
- The CAS settings must be provided from the person installing the Lynk server if not using default values.**

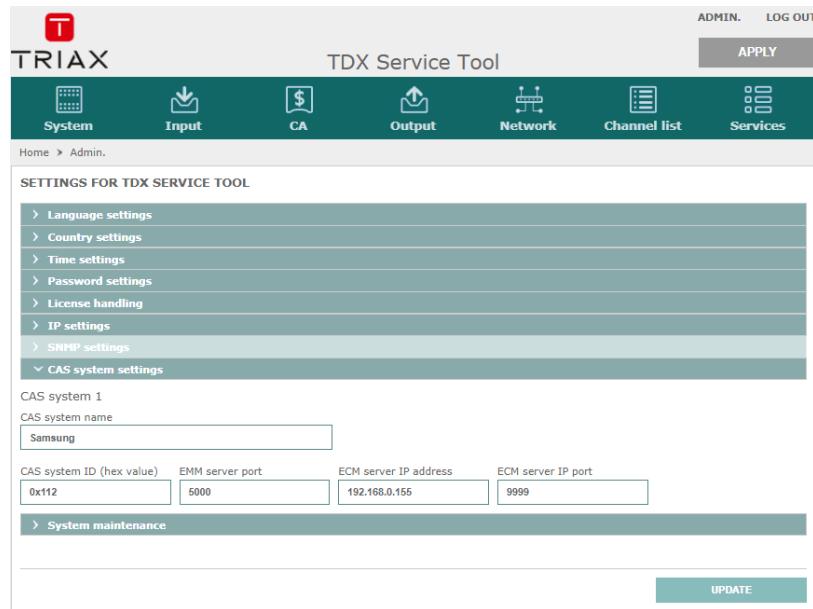

TDX simulcrypt setup

- The simulcrypt feature operates on TDX digital output modules (ie. QAM, COFDM and IP)**
- Here we have slot1:QAM, s3: PAL and s5:QAM**

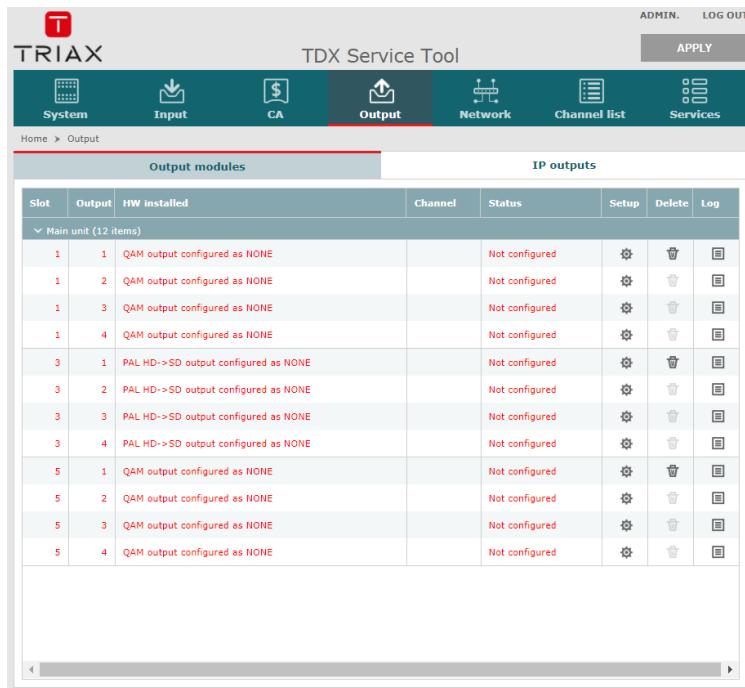


The screenshot shows the TDX Service Tool interface. The top navigation bar includes 'ADMIN.' and 'LOG OUT' buttons. Below the header are tabs: System, Input, CA, **Output**, Network, Channel list, and Services. The main content area is titled 'Output modules' and displays a table of 12 items under 'Main unit (12 items)'. The table columns are Slot, Output, HW installed, Channel, Status, Setup, Delete, and Log. All entries show 'Not configured' in the Status column. The table rows are as follows:

Slot	Output	HW installed	Channel	Status	Setup	Delete	Log
1	1	QAM output configured as NONE		Not configured			
1	2	QAM output configured as NONE		Not configured			
1	3	QAM output configured as NONE		Not configured			
1	4	QAM output configured as NONE		Not configured			
3	1	PAL HD->SD output configured as NONE		Not configured			
3	2	PAL HD->SD output configured as NONE		Not configured			
3	3	PAL HD->SD output configured as NONE		Not configured			
3	4	PAL HD->SD output configured as NONE		Not configured			
5	1	QAM output configured as NONE		Not configured			
5	2	QAM output configured as NONE		Not configured			
5	3	QAM output configured as NONE		Not configured			
5	4	QAM output configured as NONE		Not configured			

TDX simulcrypt setup

- The simulcrypt feature operates on TDX digital output modules (ie. QAM, COFDM and IP)**
- Here we have slot1:QAM, s3: PAL and s5:QAM**
- The simulcrypt tab shows 2 possible scramblers (slot 1 and 5 – the QAM output modules).**

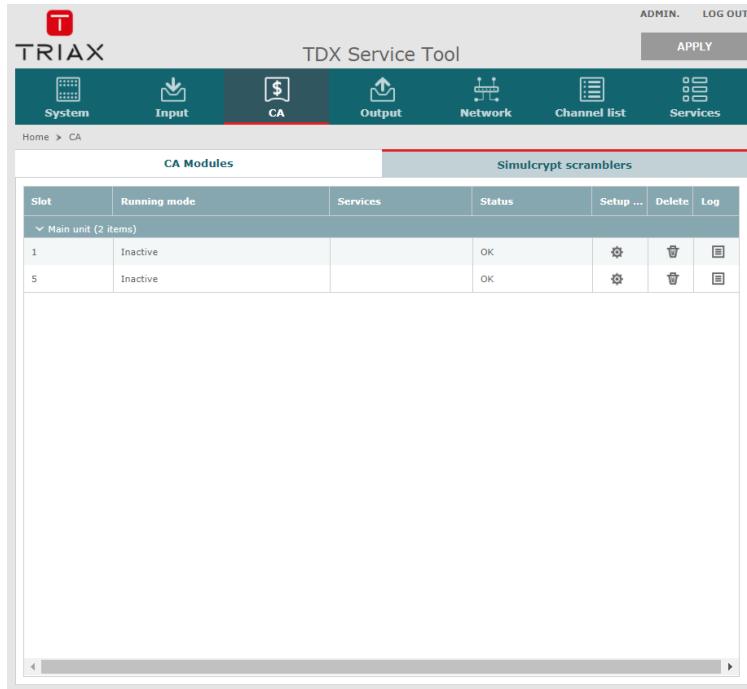

The screenshot shows the TDX Service Tool interface. At the top, there are navigation links: ADMIN., LOG OUT, and a red APPLY button. Below the header is a navigation bar with icons for System, Input, CA (highlighted in red), Output, Network, Channel list, and Services.

The main content area has two tabs: "CA Modules" and "Simulcrypt scramblers". The "CA Modules" tab is currently selected. It displays a table with columns: Slot, Running mode, Services, Status, Setup ..., Delete, and Log. Under "Main unit (2 items)", there are two entries:

Slot	Running mode	Services	Status	Setup ...	Delete	Log
1	Inactive		OK			
5	Inactive		OK			

TDX simulcrypt setup

- The simulcrypt feature operates on TDX digital output modules (ie. QAM, COFDM and IP)**
- Here we have slot1:QAM, s3: PAL and s5:QAM**
- The simulcrypt tab shows 2 possible scramblers (slot 1 and 5 – the QAM output modules).**
- Select the one to be used and select the "Running mode" to the "Samsung DRM".**

TRIAKX Service Tool

ADMIN. LOG OUT

APPLY

System Input CA Output Network Channel list Services

Home > CA > Simulcrypt scramblers

Services

Orig_STD STD Service sources Access criteria Selected

Services	Orig_STD	STD	Service sources	Access criteria	Selected
EURONEWS FRENCH SD	31220	9	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
EURONEWS GERMAN SD	31230	10	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Eurosport 1 Deutschland	31200	7	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
HSE24 EXTRA	31210	8	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
RTL Austria	28800	1	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
RTL CH	28825	6	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
RTL2 Austria	28810	3	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
SUPER RTL A	28815	4	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
VOX Austria	28805	2	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
VOX CH	28820	5	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>


Submit

STATUS INFORMATION

CAS System 1:: Samsung; CAS 1 status:: Connected;

TDX simulcrypt setup

- The simulcrypt feature operates on TDX digital output modules (ie. QAM, COFDM and IP)**
- Here we have slot1:QAM, s3: PAL and s5:QAM**
- The simulcrypt tab shows 2 possible scramblers (slot 1 and 5 – the QAM output modules).**
- Select the one to be used and select the "Running mode" to the "Samsung DRM".**
- Select the services to be scrambled (note the Samsung DRM does not use "access criteria")**

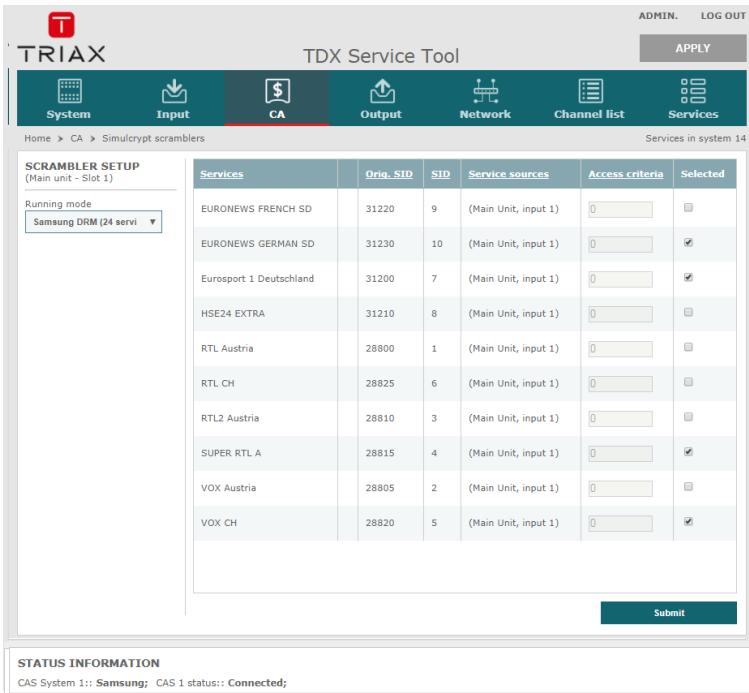


The screenshot shows the TDX Service Tool interface with the CA tab selected. The left sidebar shows 'SCRAMBLER SETUP (Main unit - Slot 1)' and a dropdown for 'Running mode' set to 'Samsung DRM (24 serv)'. The main area displays a table of services with columns: Services, Orig. SID, SID, Service sources, Access criteria, and Selected. Services listed include EURONEWS FRENCH SD, EURONEWS GERMAN SD, Eurosport 1 Deutschland, HSE24 EXTRA, RTL Austria, RTL CH, RTL2 Austria, SUPER RTL A, VOX Austria, and VOX CH. Most services have their 'Selected' checkbox checked, except for EURONEWS GERMAN SD, Eurosport 1 Deutschland, HSE24 EXTRA, SUPER RTL A, and VOX CH. At the bottom, there is a 'STATUS INFORMATION' section stating 'CAS System 1:: Samsung; CAS 1 status:: Connected;' and a 'Submit' button.

Services	Orig. SID	SID	Service sources	Access criteria	Selected
EURONEWS FRENCH SD	31220	9	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
EURONEWS GERMAN SD	31230	10	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Eurosport 1 Deutschland	31200	7	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
HSE24 EXTRA	31210	8	(Main Unit, input 1)	<input type="checkbox"/>	<input type="checkbox"/>
RTL Austria	28800	1	(Main Unit, input 1)	<input type="checkbox"/>	<input type="checkbox"/>
RTL CH	28825	6	(Main Unit, input 1)	<input type="checkbox"/>	<input type="checkbox"/>
RTL2 Austria	28810	3	(Main Unit, input 1)	<input type="checkbox"/>	<input type="checkbox"/>
SUPER RTL A	28815	4	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>
VOX Austria	28805	2	(Main Unit, input 1)	<input type="checkbox"/>	<input type="checkbox"/>
VOX CH	28820	5	(Main Unit, input 1)	<input type="checkbox"/>	<input checked="" type="checkbox"/>

TDX simulcrypt setup


- The simulcrypt feature operates on TDX digital output modules (ie. QAM, COFDM and IP)
- Here we have slot1:QAM, s3: PAL and s5:QAM
- The simulcrypt tab shows 2 possible scramblers (slot 1 and 5 – the QAM output modules).
- Select the one to be used and select the "Running mode" to the "Samsung DRM".
- Select the services to be scrambled (note the Samsung DRM does not use "access criteria")
- Configure the output as normal using the services _scrambled

NOTE: You must scramble and output the service(s) on the same output module !

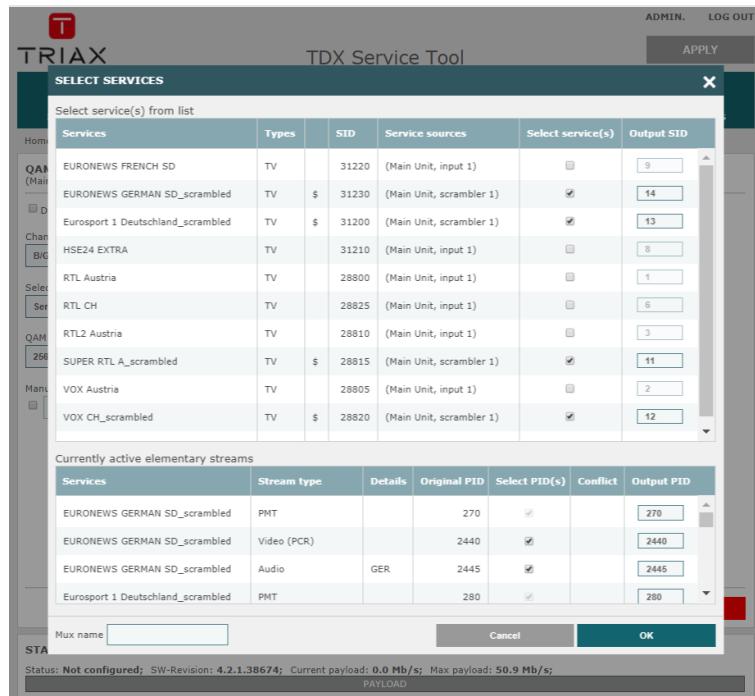


Lynk server (which role in the system)

- The DRM (Digital Rights Management) server
- Provides the:
 - ECM (Entitled Control Message)
 - EMM (Entitled Management Message)
- Only works with TDX RF output (DVB-T and DVB-C).
 - IP-out requires additional Sinc server

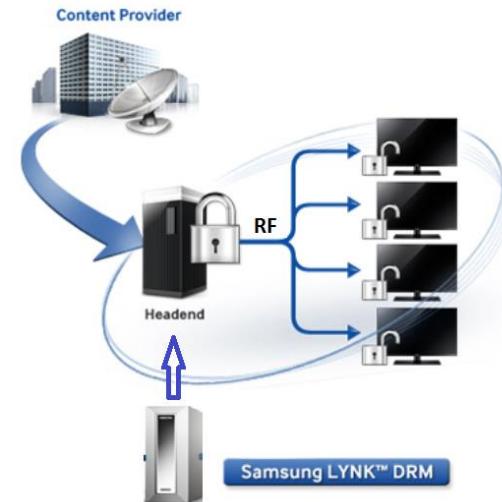

Principle diagram RF-out

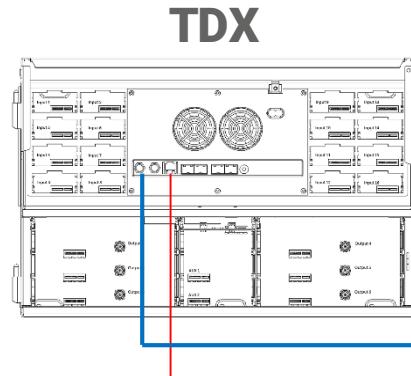

RF out



Lynk server





THANK YOU FOR ATTENDING