

Samsung SmartTV Configuration


HotelMode Configuration

Access HotelServiceMenu by pressing following buttons one after another:

The TV must be switched OFF!

ATTENTION: Option is not available when VIRTUAL STANDBY is enabled! - Disable in HotelServiceMenu to make it available

INFO - MENU - MUTE - POWER

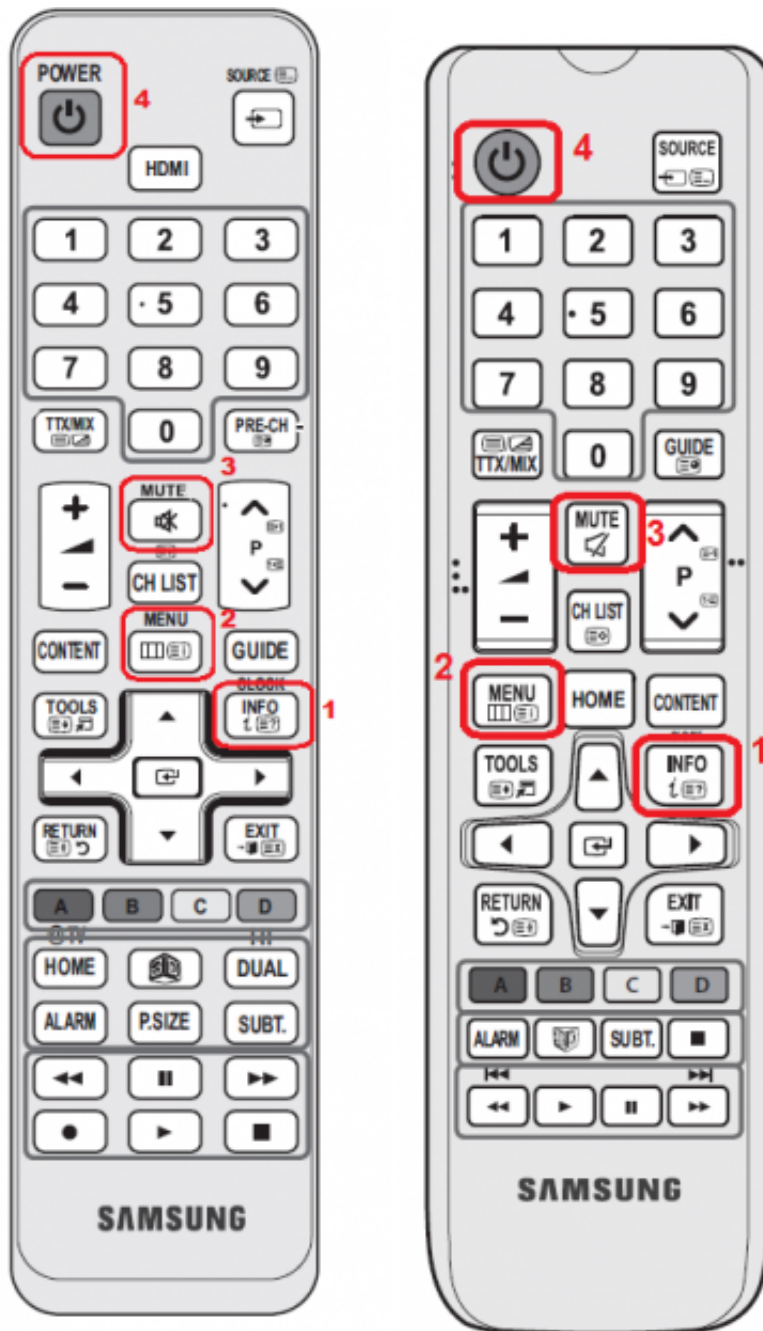

Alternativ HotelServiceMenu access after initial configuration

Change source form H-Browser to something else (for example PC)


Press following buttons one after another:

MUTE - 1 - 1 - 9 - ENTER

HotelMode Configuration HOSPITALITY MODE


First set your TV in the hotelmode.

Go to CONTROL - HOTEL OPTION - HOSPITALITY MODE
and set the mode to "STANDALONE"

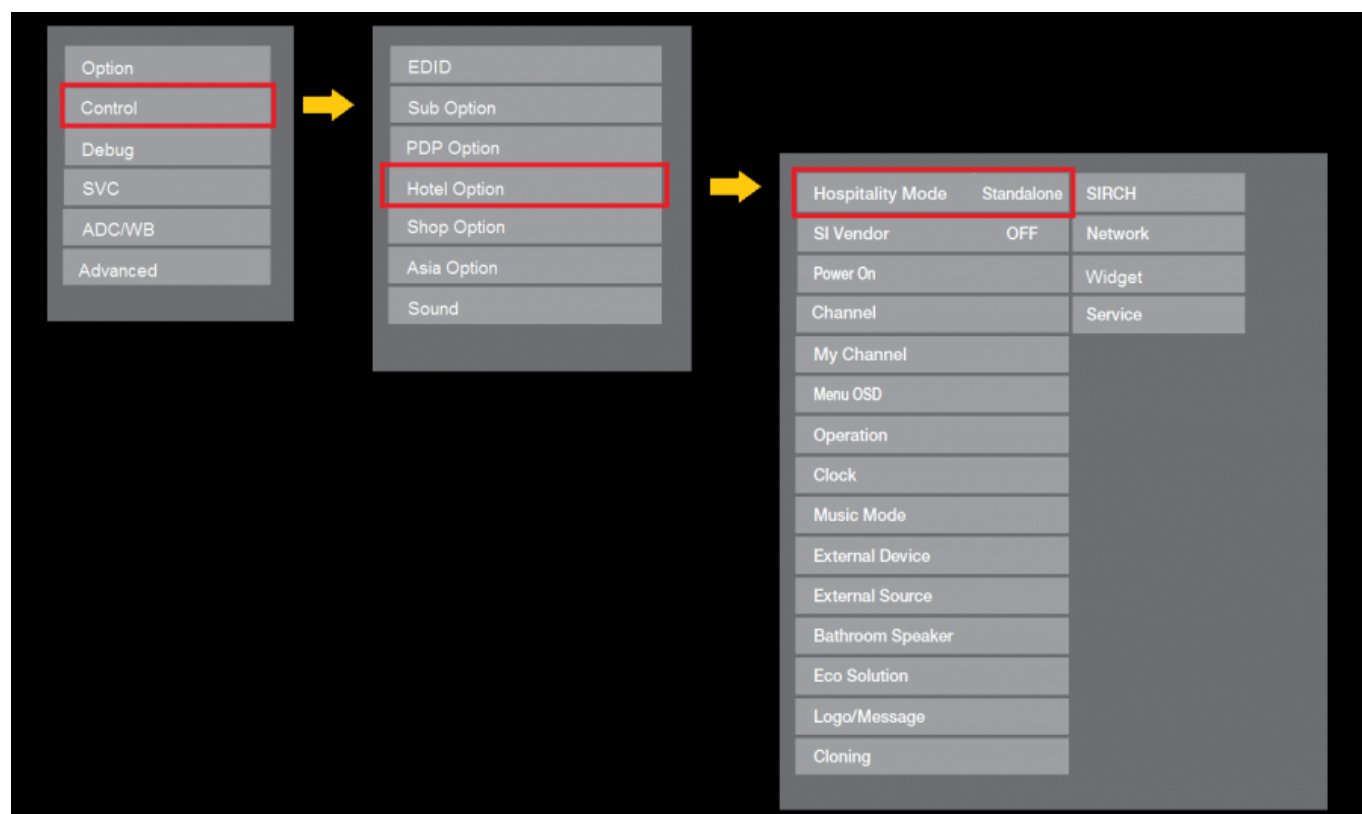

HotelMode Configuration MENU OSD

Set the Menu OSD OFF to disable info messages

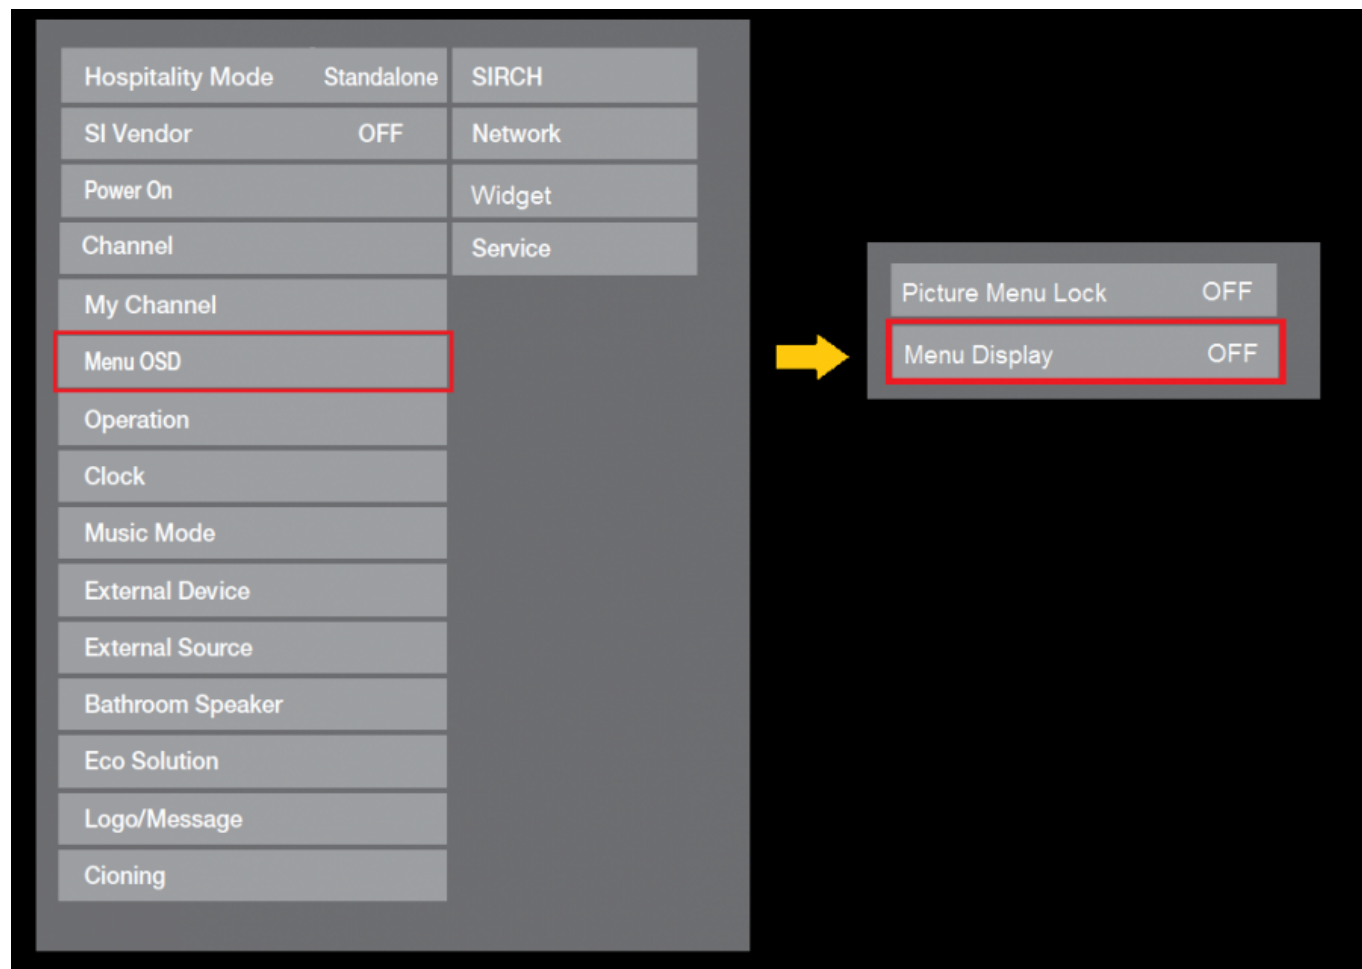


HotelMode Configuration Bootlogo


NOTE: Bootlogo will not be shown if VIRTUAL STANDBY is activated.


Set a bootlogo for the SmartTV-boot process.

Save the file to the USB-Sticks root directory.

connect the USB Stick to your TV and follow this steps:

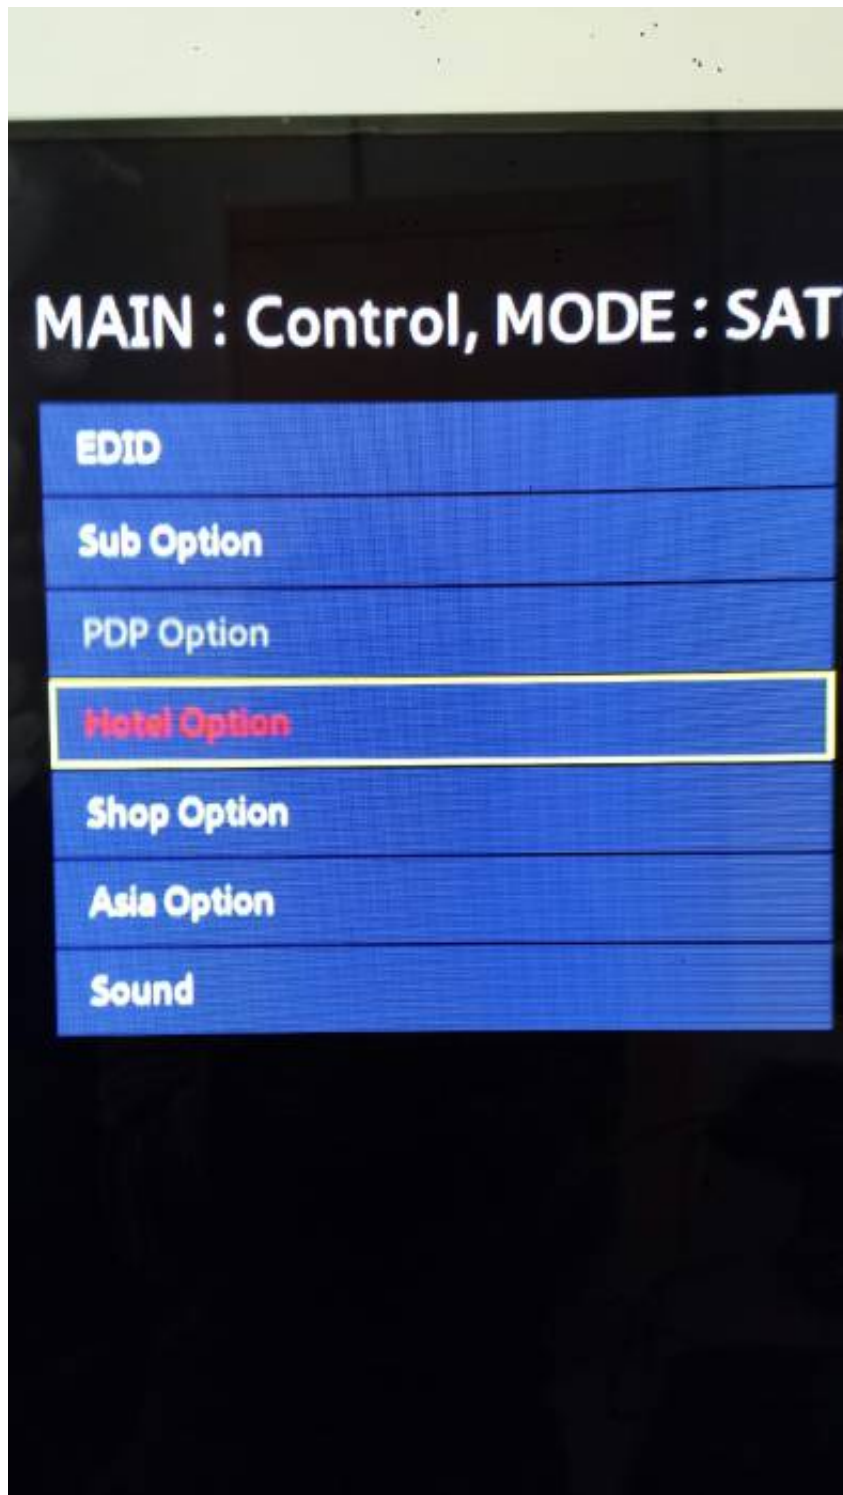

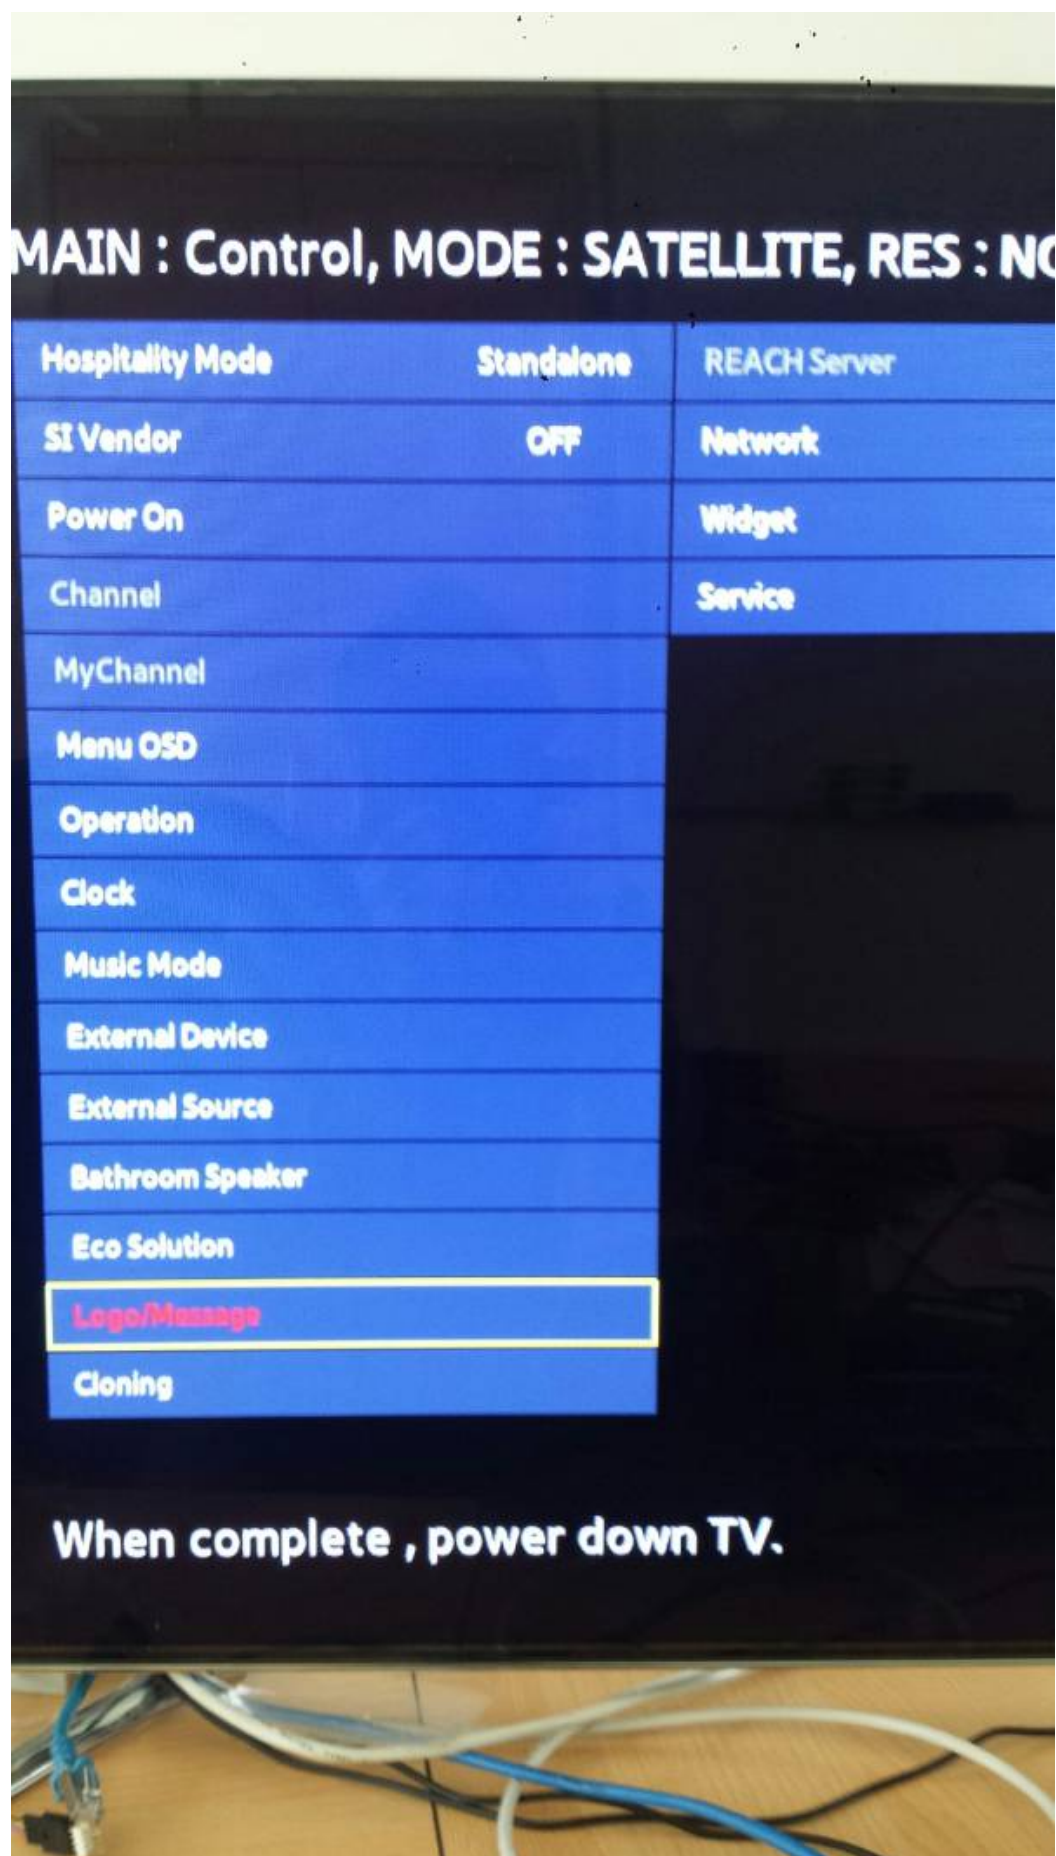

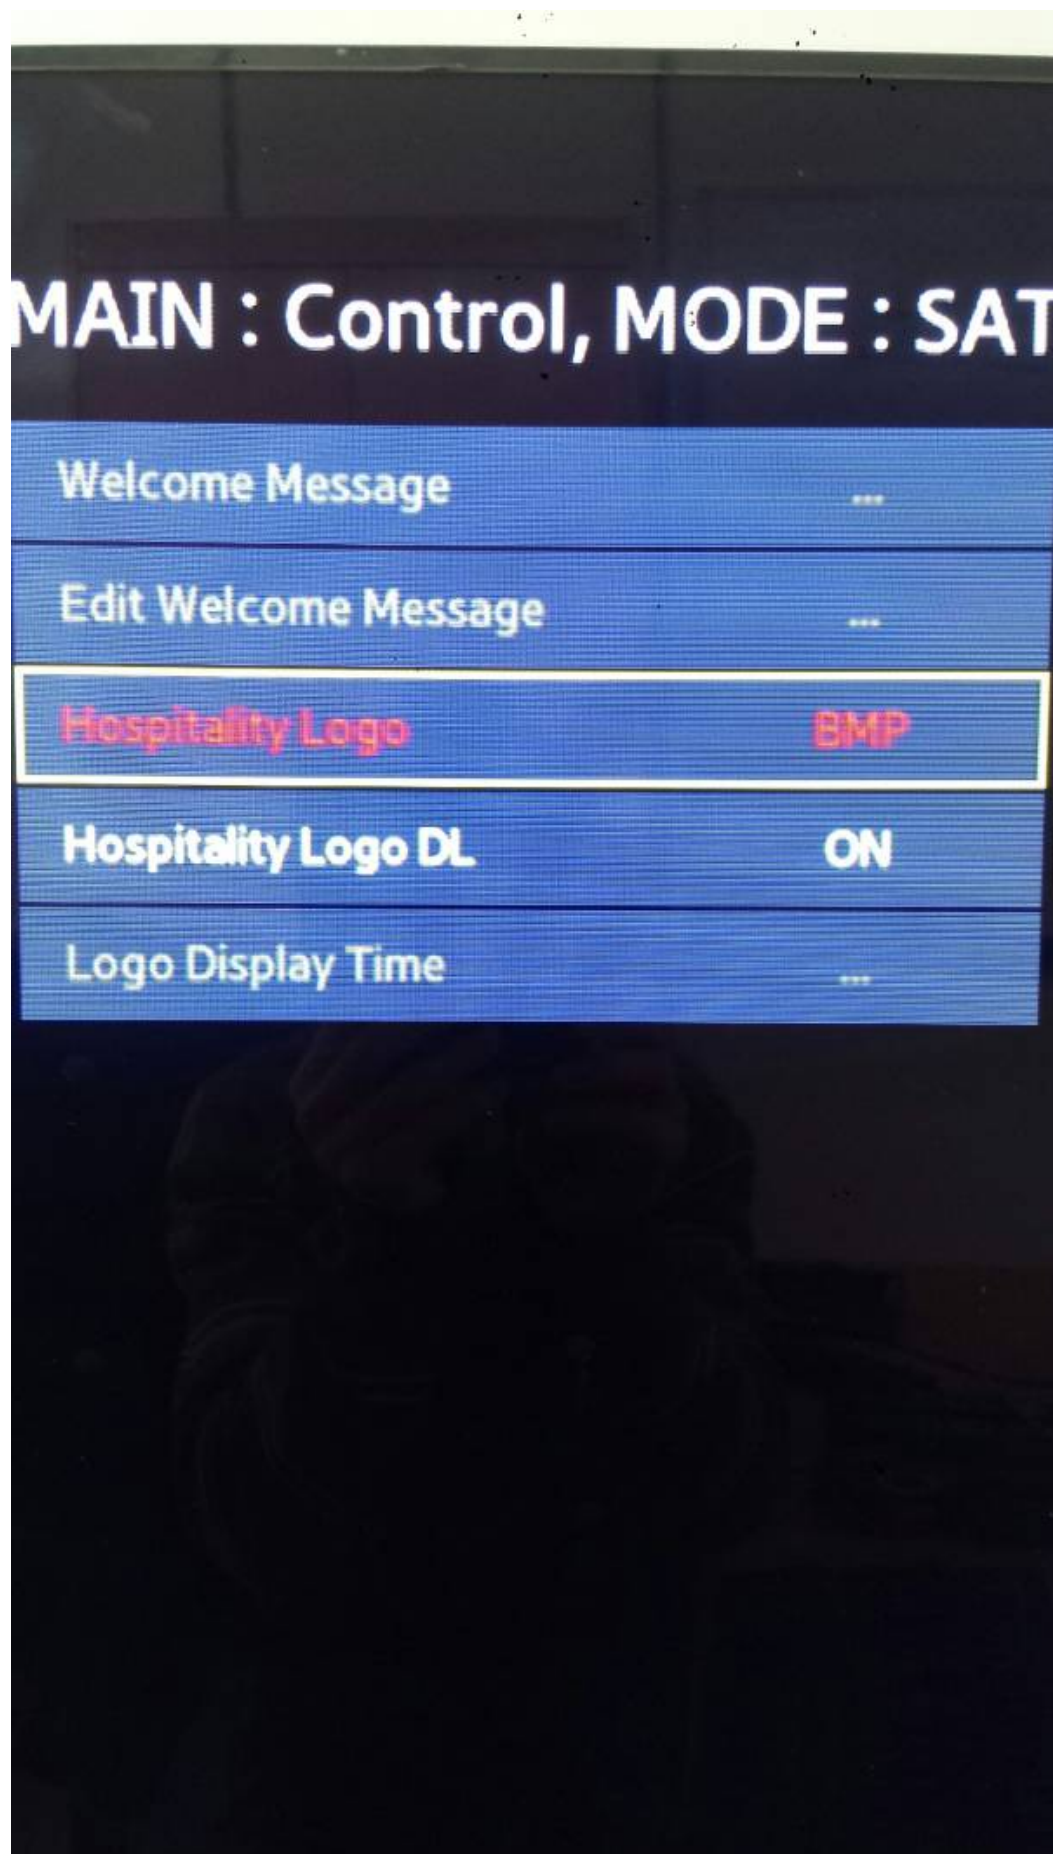


MAIN : Control, MODE : SATEL

Welcome Message	---
Edit Welcome Message	---
Hospitality Logo	BMP
Hospitality Logo DL	ON
Logo Display Time	---

HotelMode Configuration NETWORK


Here you configure the network settings. The Samsung smartTV can be connected via WLAN or WIRED.

Select //NETWORK//

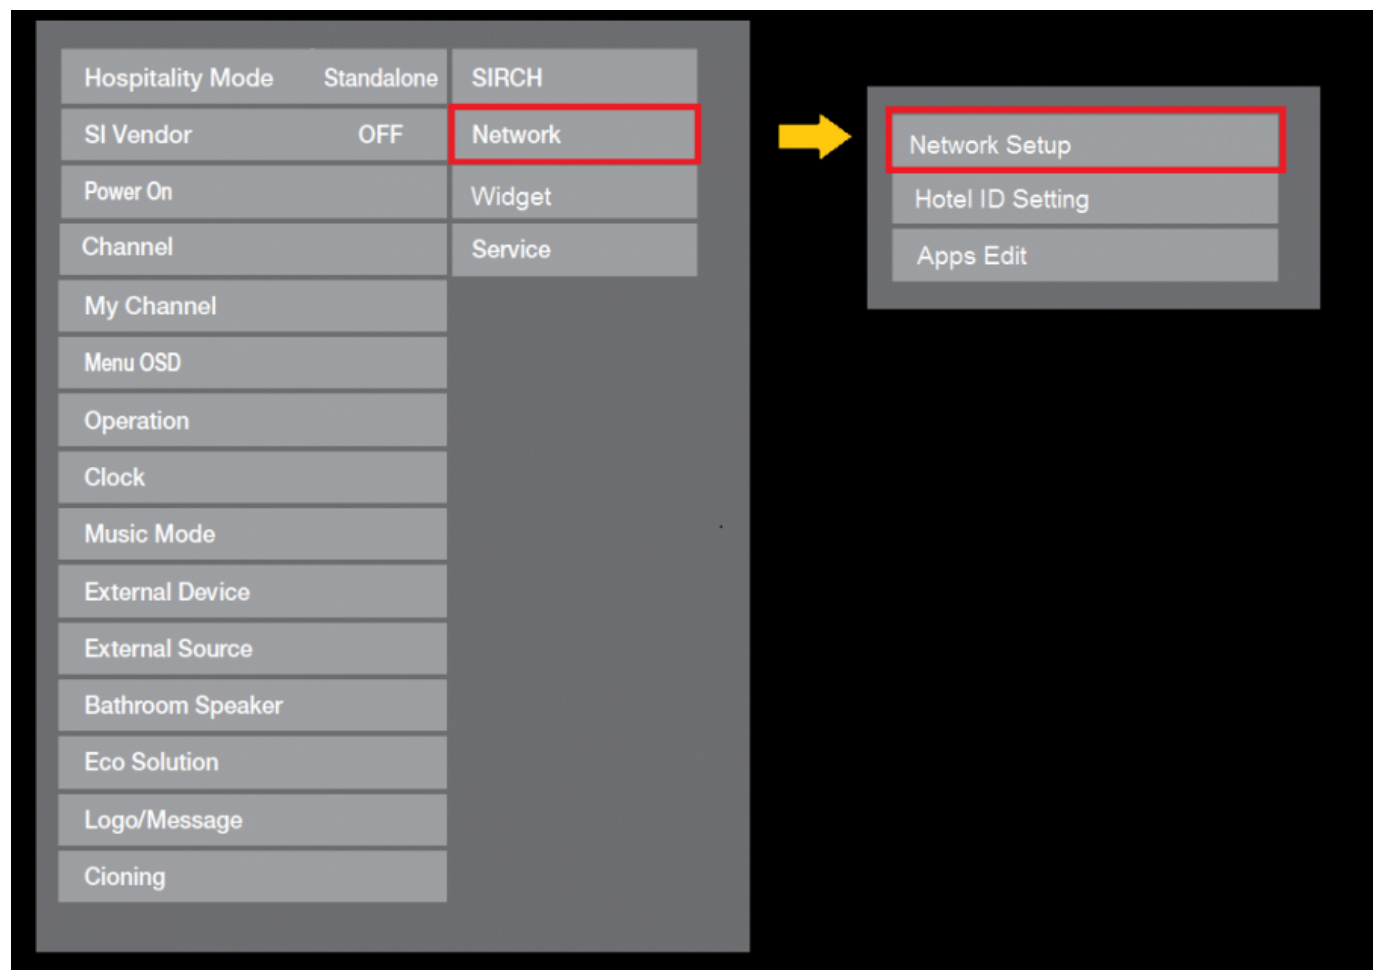

NOTICE: OSD will change to UserGUI, press MENU on the remote after configuration to go back.

Select the connection type and set the //IP-
ADDRESS//, //NETMASK// and //GATEWAY// or //DHCP//

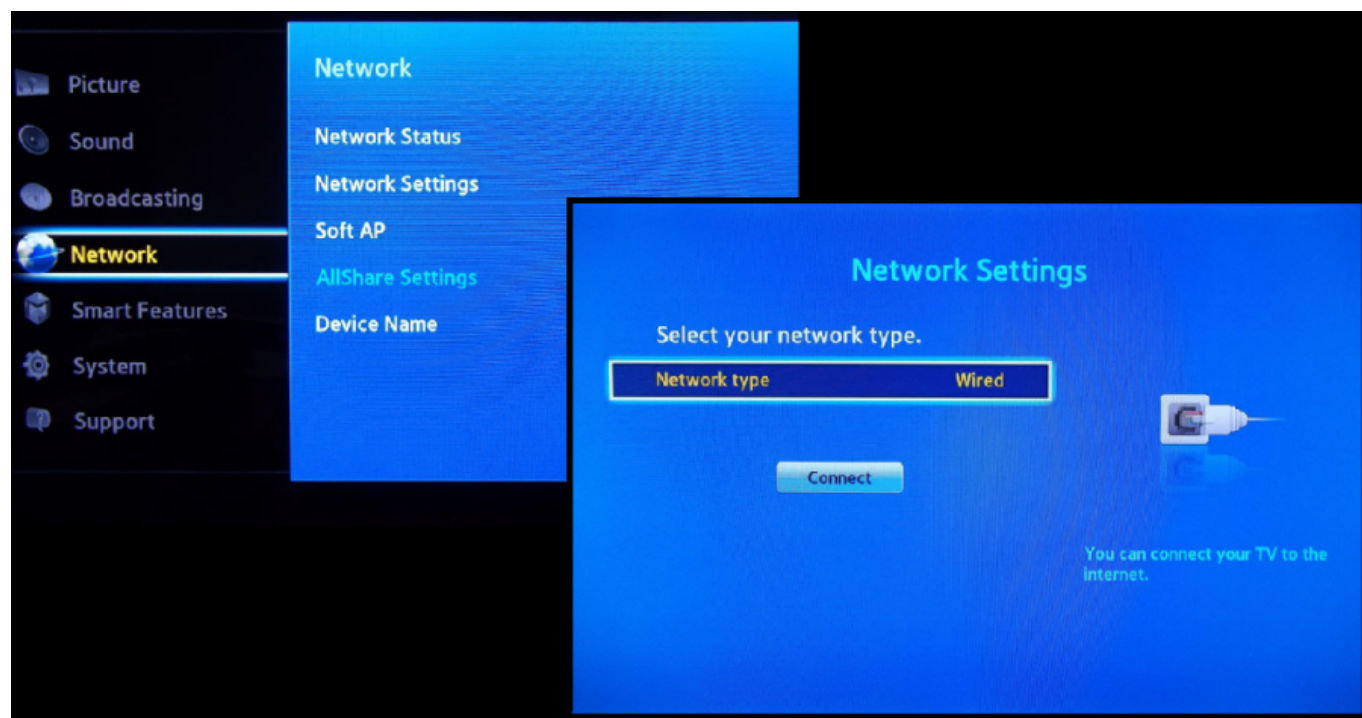


HotelMode Configuration WIDGET

set WIDGET MODE ON and select the SOLUTION TYPE depending on the TV series.

SOLUTION TYP

H-BROWSER - Samsung 590er/790er

VENDOR SERVER - Samsung 690er/890er

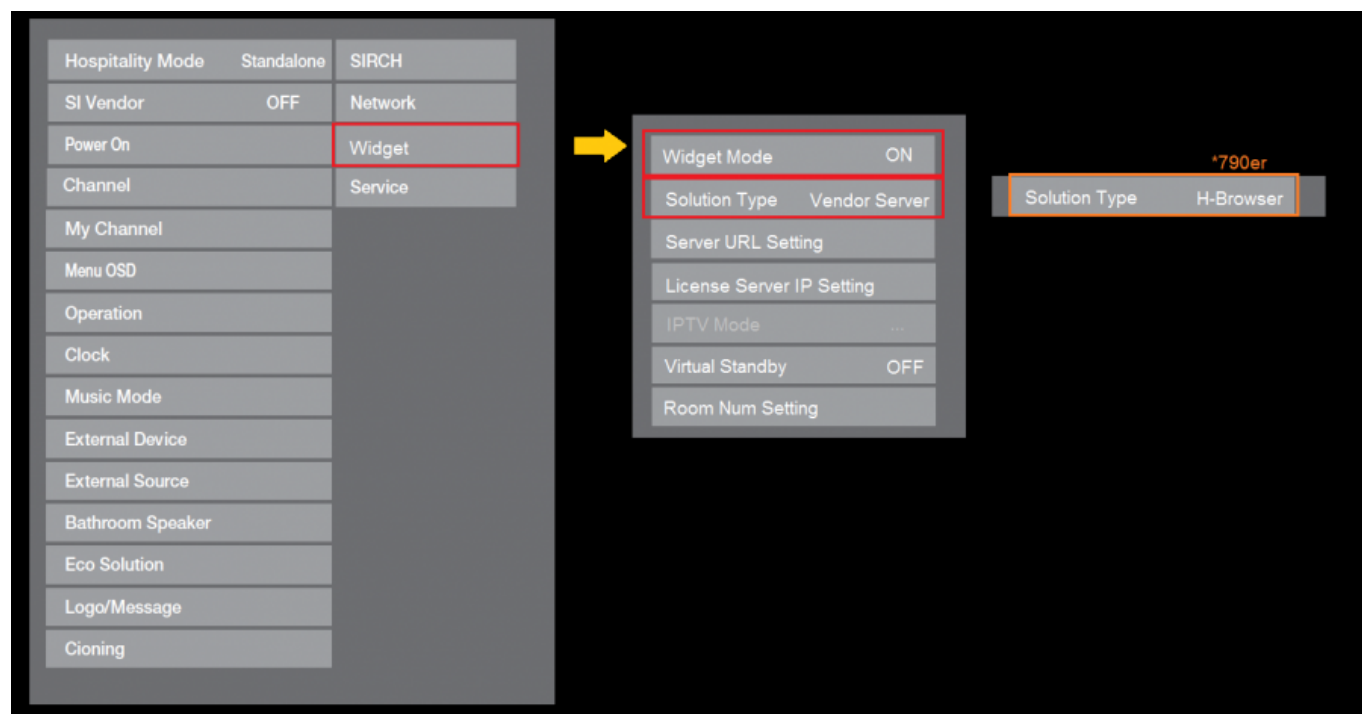

HotelMode Configuration

set the VIRTUAL STANDBY to ON. This is important for the bootup time.


****ATTENTION!****

****ATTENTION!****

****ATTENTION!****

VIRTUAL STANDBY is still a buggy implementation from Samsung. Please check your TV/Environment before using this feature.

Please note to have the latest FW installed.

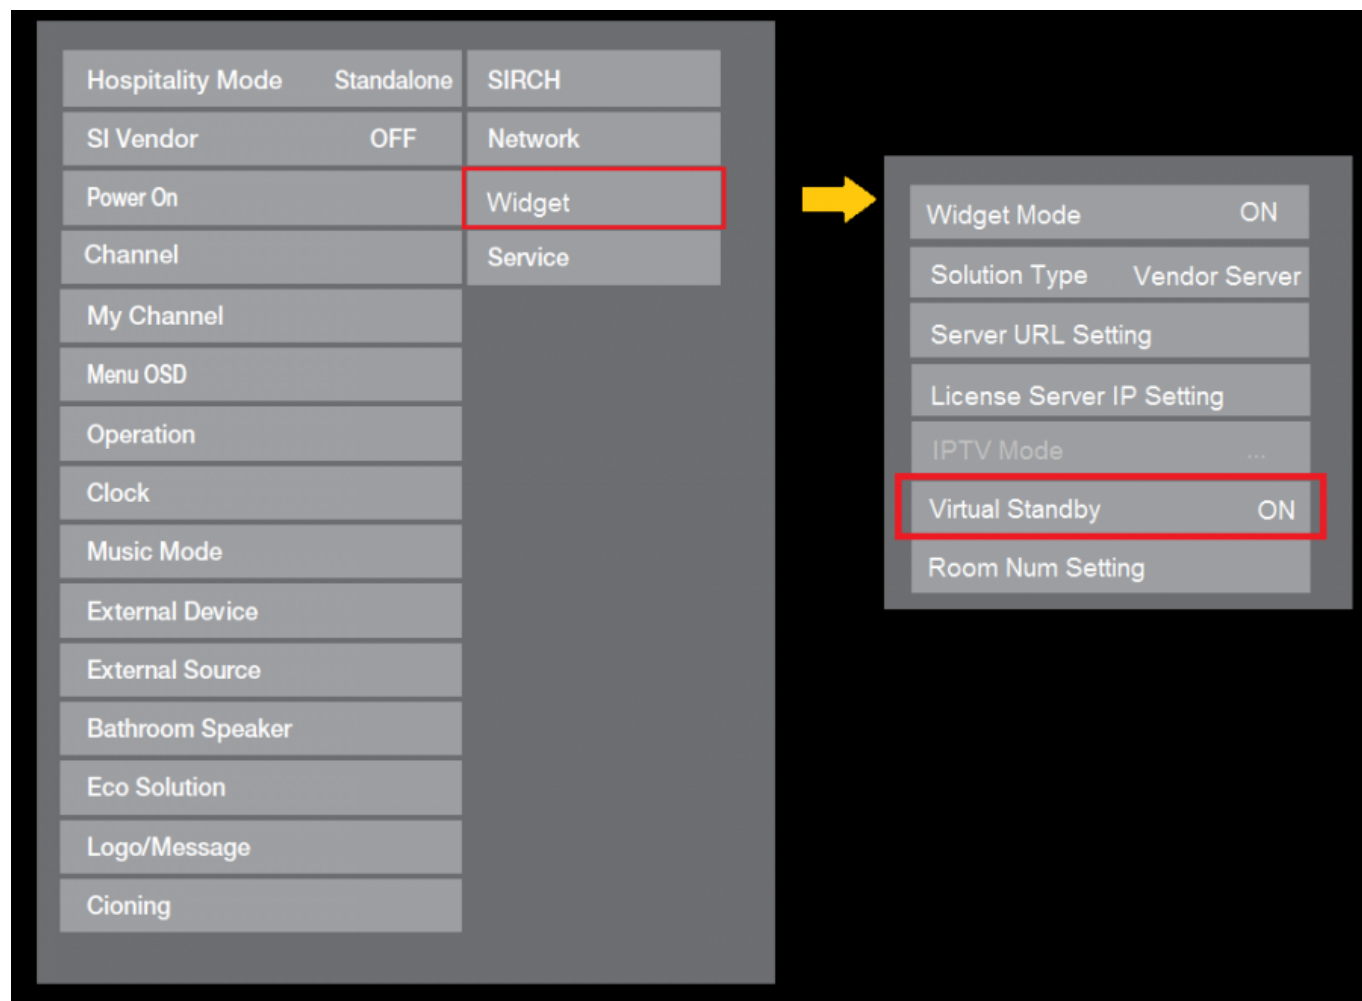


HotelMode Configuration SERVER URL SETTING


The Server-URL-IP-Address depend on the system setup and will be given you by the responsible projectmanager.

set the SERVER URL IP:


<http://setup.triax.biz:9090>

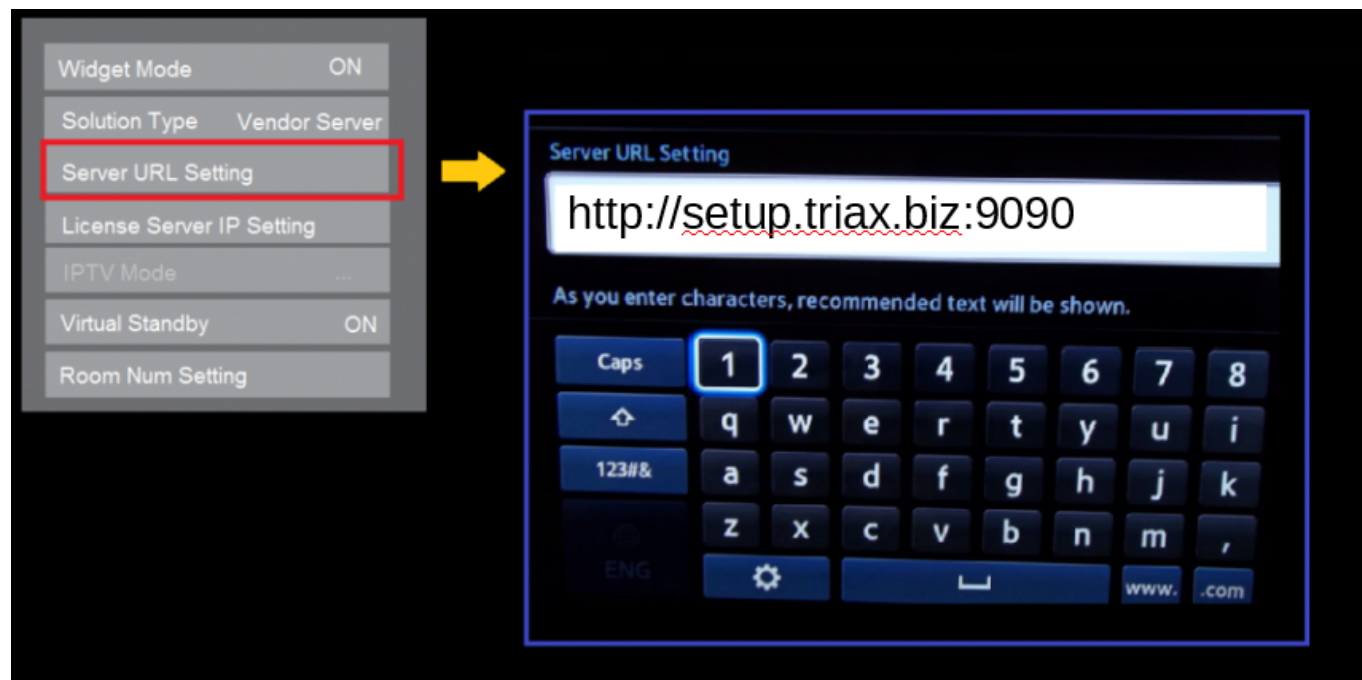

HotelMode Configuration APP SETUP

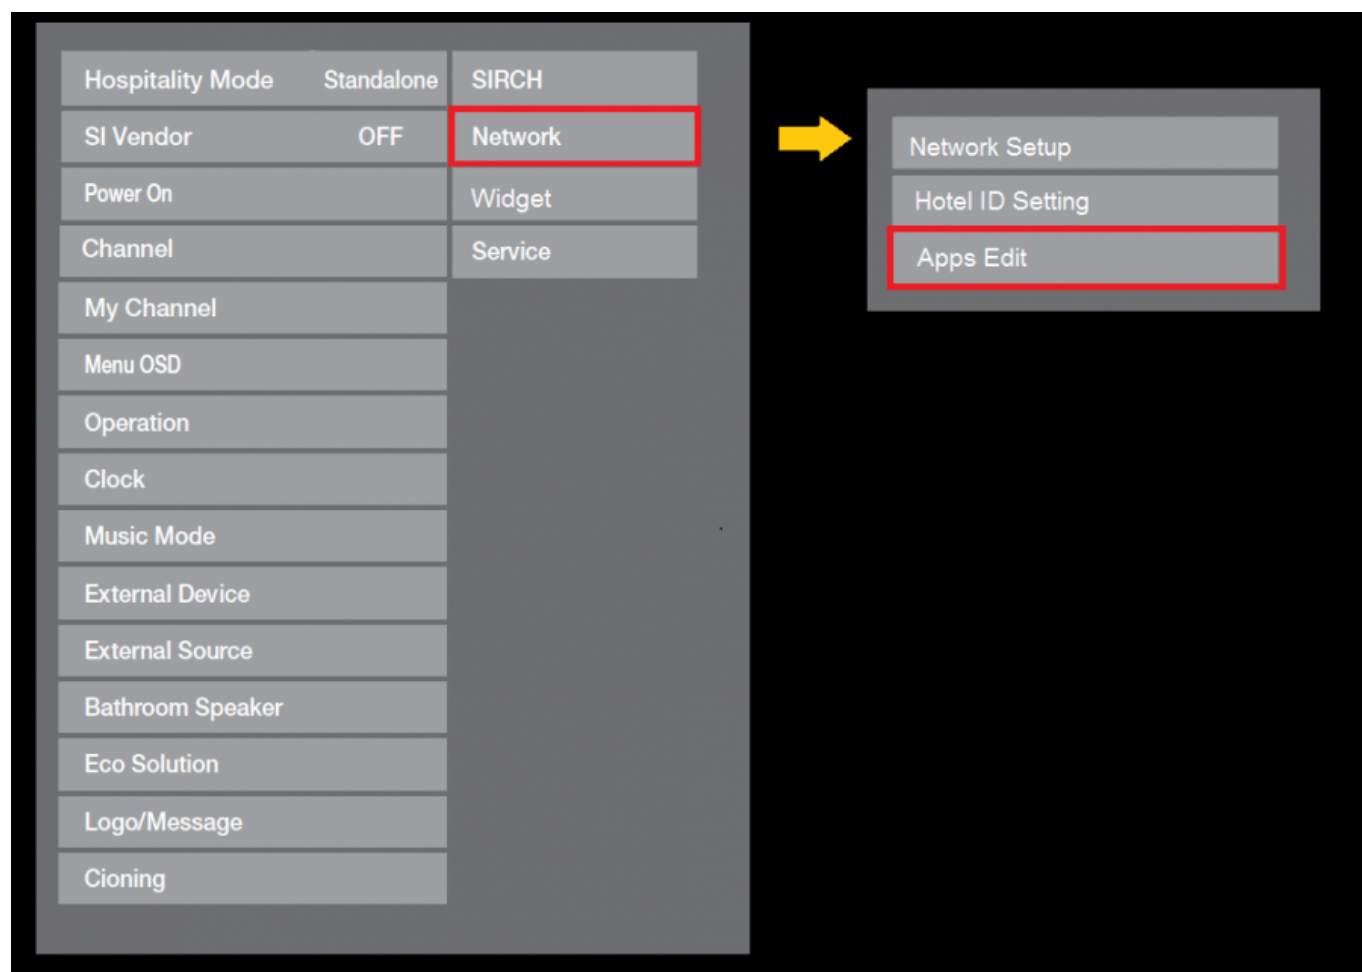

NOTICE: OSD will change to UserGUI, press MENU on the remote after configuration to go back.

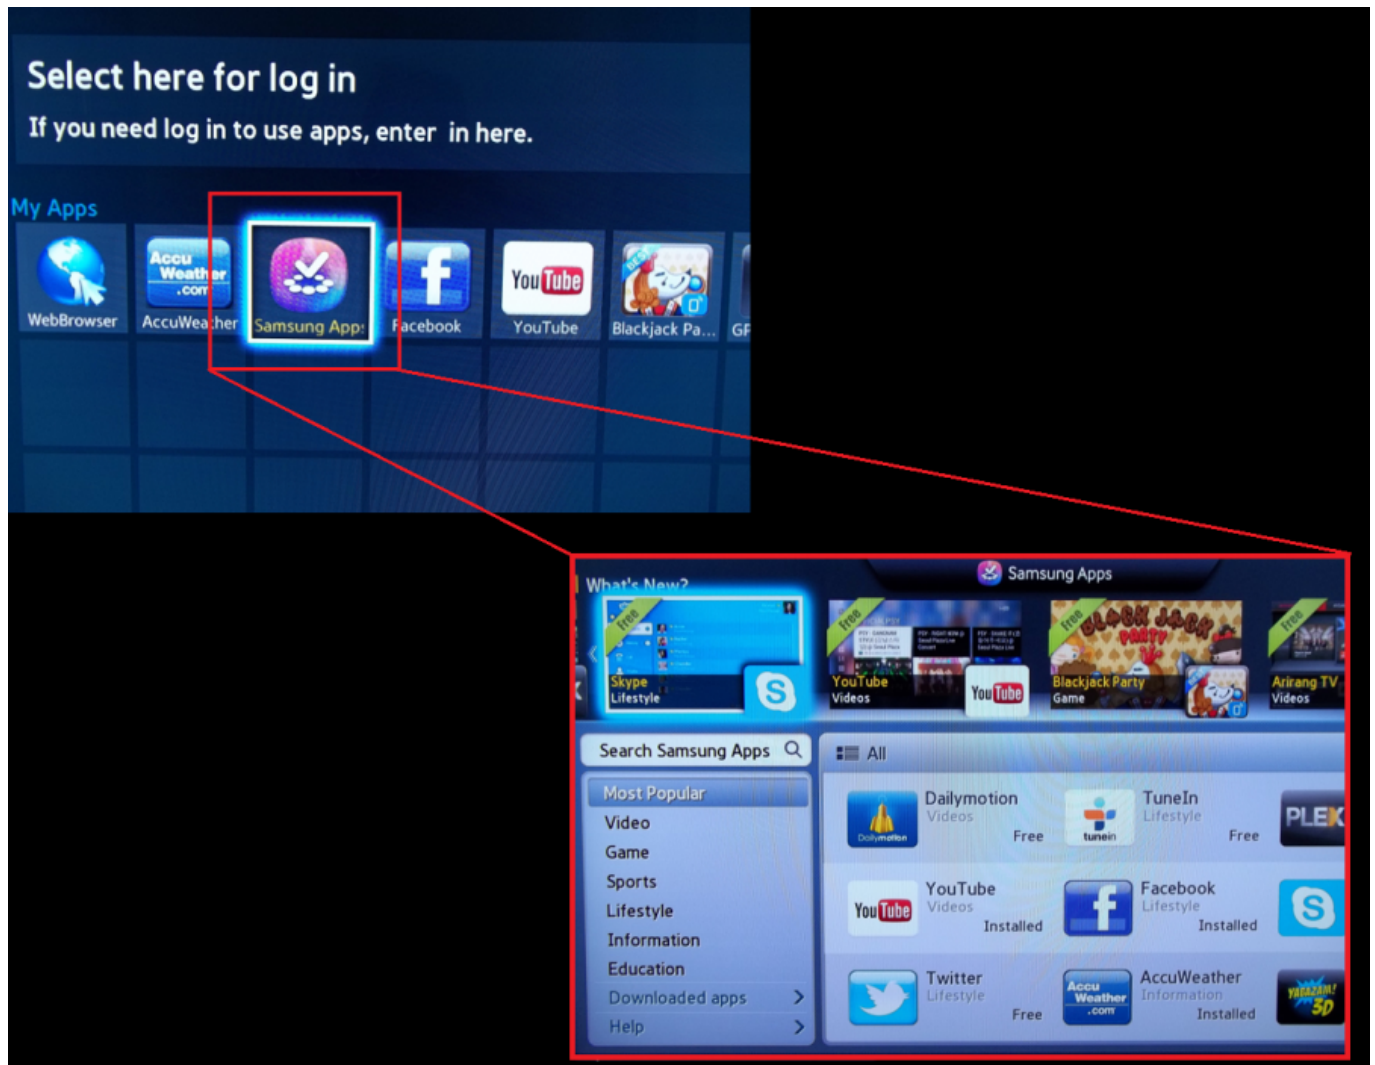

PLEASE NOTICE: To finish the configuration you have to POWER OFF the TV
The LED will blink for ~ 5Sec during Save

APP Limitations

Due to the fact that Samsungs HotelTV is based on the Consumer model all Apps that require login data like:

- Twitter
- Facebook
- etc.

are rather useless. The reason is Samsungs system design. A user account for this APPs has to be set within the TVs firmware and not within the APP. This means, a user would have to:

1. Disable Hotelmode
2. Enter his credentials in the SmartTV (as admin with all abilities to change settings
3. Enable Hotelmode
4. Delete his credentials when leaving the hotel room

Remote Control Pairing

Press blue key for ~7sec, press a number 1-9 => means max. 9 devices are programmable (for a room / into range). Reset with yellow key.

B-series (for example 350, BN59-00901A) also programmable with blue and yellow key.

EA-series: **CAUTION!** Number setup with yellow key!

Remote control No.	Set	Reset
AA59-00629A	Blue key	Yellow key
AA59-00502A		
AA59-00571A	Return + Mute key	Exit + Mute Key

EB-Serie AA59-00818A

Return+ Mute Key

Exit + Mute Key

CAUTION! Press RETURN + MUTE / EXIT + MUTE for ~13sec

2013 EB-series: Press also RETURN + MUTE / EXIT + MUTE.

2014 EC-series: Press also RETURN + MUTE / EXIT + MUTE.

2015 ED-series: Press also RETURN + MUTE / EXIT + MUTE.

CAUTION: Programming works only, if the subtitles are deactivated!